



Filter Replacement Guide





Build Equinox support@buildequinox.com (773)-492-1893

Rev 1.0 - 09/02/2022

© Build Equinox 2022

Filters

The CERV2 contains filters for both incoming fresh air from outside and return air from inside. The filters can be easily accessed by unscrewing the top two thumb-screws and removing the top filter access cover. When replacing the filters, care should be made not to drop any object into the openings.


The CERV2 comes standard with two MERV 13, 10"x20"x1" filters. Any 10"x20" filter 1" or 2" thick can be used, although using filters higher than MERV 13 can cause higher fan power for little gain in filtration. Ensure that the filter direction corresponds to the airflow direction sticker on the inside of the CERV (points down). Filters should be replaced at least every 90 days, but indoor and outdoor particulate levels may necessitate more frequent changing. The inside and outside filters may also have different changing schedules. The return air filter may need less frequent changing than the fresh air filter.

Regular filter maintenance is important in keeping the inside air healthy and free from particulates as well as allowing for peak system operating efficiency.



CERV filters can be purchased at www.buildequinox.com/store/


Touchscreen Controller – Changing Filters

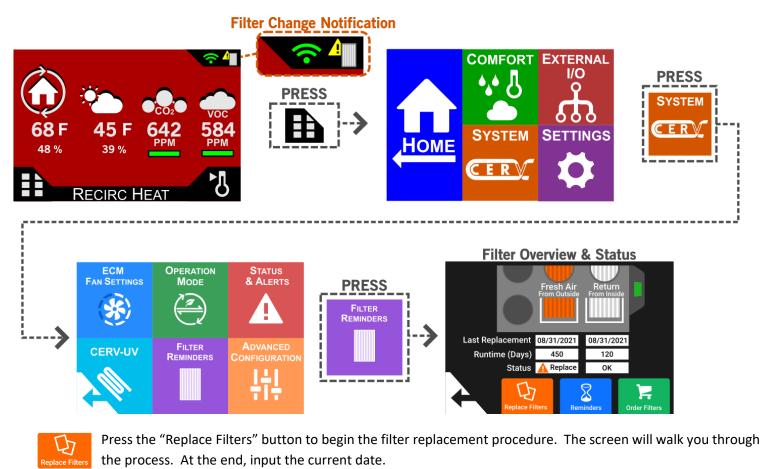


Press the "Reminders" to configure the frequency of filter notifications on your CERV

Accessing Filters for Replacement

3

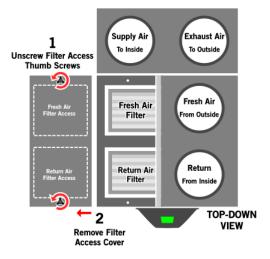

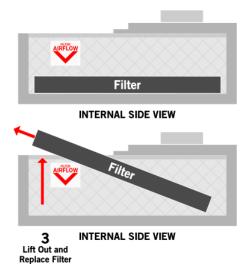



1103 N. High Cross Rd. Urbana, IL 61802

support@buildequinox.com (773)-492-1893

© Build Equinox 2021 All Rights Reserved